



## Reveal the adjustment panel

To fine-tune the position of your drawer fronts, open the drawer, place your hand on the side of your drawer (one side at a time) and slide the outer panel toward the cabinetry.

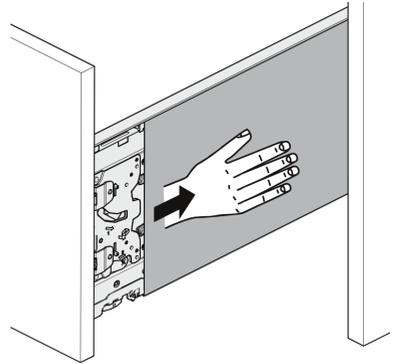


## Height adjustment of drawer front

One side at a time, on both sides of the drawer, turn the pictured screw to move the drawer front up and down ( $\pm 2\text{mm}$ ). Turn the screw away from the cabinetry to lower the drawer front. Turn the screw towards the cabinetry to move the drawer front upwards.

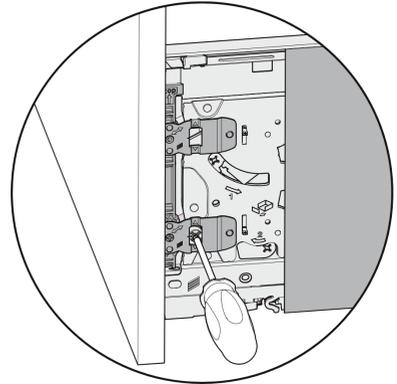


## Sideways adjustment of drawer front

One side at a time, on both sides of the drawer, turn the pictured screw to move the drawer front sideways ( $\pm 1.5\text{mm}$ ). Turn the screw away from the cabinetry to move the drawer front left. Turn the screw towards the cabinetry to move the drawer front right.

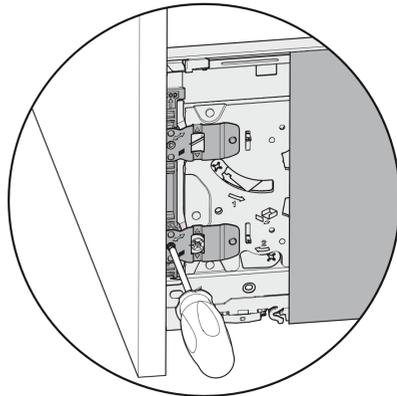

## Tilt adjustment of drawer front


Remove top strip panels from both sides of the opened drawer. Find pictured screw near the back of the side panel. Twist screws clockwise to tilt drawer front toward the cabinetry. Twist screws anticlockwise to tilt drawer front away from the cabinetry.

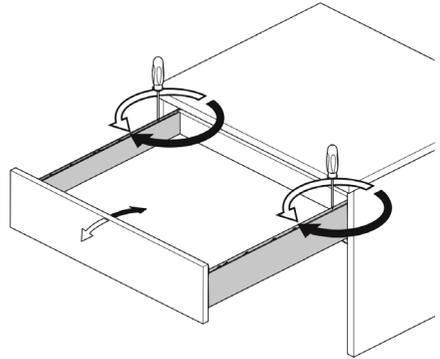

## To remove metal drawers

**Empty the drawer before attempting to remove it.** The weight of the drawers may be more than you expect.

- 1 Open the drawer until fully extended.
- 2 Holding both sides of the drawer, gently lift upwards.

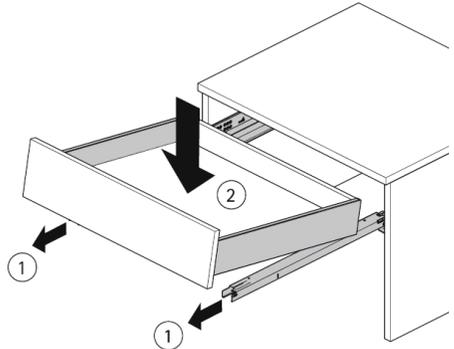

## To refit drawers

Position the drawer onto the runner and push it into place until you hear a click.

It will be automatically connected to the runner by the two catches at the back.

